

Use of the Super Lawn Truck Onboard Fuel Transport System

Turning On the System

To operate your fuel system, you must first turn your master switch to the “on” position. This master switch is located on the front dash of the truck just to the left and under the steering wheel. It is a toggle switch with amber light that glows when it is in the “on” position. This safety switch is designed to prevent accidental activation of the system by small children or prevent easy access to gas inventory. After turning the switch to the “on” position, locate the two-position toggle switch directly above the tank you wish to receive fuel from. Flip this switch to the “on” position. This will engage the 12-volt fuel pump. Then remove the hose from which you need fuel and actuate the gas nozzle located on the end of the fuel hose.

Turning Off the System

To turn the fuel system off, release the gas nozzle. Turn the two-position toggle switch to the “off” position and replace the fuel hose and nozzle back into the proper holder. Lastly, turn the “master switch” to the “off” position.

IMPORTANT – DO NOT LEAVE THE PUMP RUNNING OVER 5-MINUTES. THIS WILL CAUSE THE PUMP TO BURN UP AND THE WARRANTY WILL THEN BE INVALID.

Maintaining Your Fuel System

It is recommended that you drain your fuel system once per year to remove all debris and water. To accomplish this task, simply remove the plug located in the bottom of the tank and allow dirty fuel to drain into the catch pan. This fuel can be disposed with your waste oil. Also located on your fuel system are two inline fuel filters. These should also be replaced once per year to maximize fuel filtering and flow. These filters are available through your Super Lawn Truck dealer.

NOTE - THE FUEL STATION SYSTEM POWER WIRING (BROWN WIRE), HAS AN IN-LINE FUSE HOLDER (10 AMP) LOCATED INSIDE THE CHASSIS FRAME.

WARRANTY INFORMATION

TRUCK, CAB AND CHASSIS

ENGINE	TIRES	LIGHTS
BATTERIES	CROSS-MEMBERS	INSTRUMENTS
TRANSMISSION	FRAME RAILS	BRAKES
AXLES	ENGINE EMISSIONS	ALIGNMENTS

CHECK OWNER’S MANUAL OR SEE YOUR LOCAL DEALER FOR DETAILS

**SUPER LAWN TRUCK SYSTEM
ONE-YEAR WARRANTY
*ALL SUPER LAWN TRUCK ITEMS AND COMPONENTS***

If any part of your Super Lawn Truck manufactured or installed components fail within one year of the original purchase, we will replace or repair the product, parts and labor free of charge to the original owner. Our warranty does not apply in the event of failure beyond normal wear and tear, accidents or misuse. Please notify our office and document any failure with photos and a phone call to 866-923-0027.



CONTACT INFORMATION

Our Company takes great pride in our commitment to offer quality products and services. Our goal is to ensure that you receive the best customer service available.

To contact our office, just use any of the following numbers or e-mail addresses. Our knowledgeable staff will be able to answer any questions you may have regarding our products and services.

SUPER LAWN TRUCKS, INC.
WORLD HEADQUARTERS
1610 Peach Parkway
Fort Valley, GA 31030

TOLL –FREE
866-923-0027

OFFICE
478-822-9704

FAX
478-822-9707

TONY BASS
President
tony@superlawntrucks.com

WEBSITE
WWW.SUPERLAWNTRUCKS.COM