

### **Shift Lock-Fuse Link Issue**

The vehicle will not go into gear/stuck in park

It is engaged in "Shift Lock".

The back-up camera is wired through the ignition so it is only on when the truck is on. This appears to be an issue with the Isuzu "fuse link" failing on occasion. The fuse link needs to be replaced and it MUST go in Slot #18.

**Fix-**Take the Fuse Link out and replace just the fuse. Now the Shift Lock will go away, but the backup camera will not work. A new link will be sent to the customer and then the camera system will work once replaced.